




KIT 20-3935-1

HONDA ADAS MATS

HUNTER
Engineering Company

STORAGE INSTRUCTIONS

Form AM08124-00
Publication Date: 01-25
Supersedes: 05-23

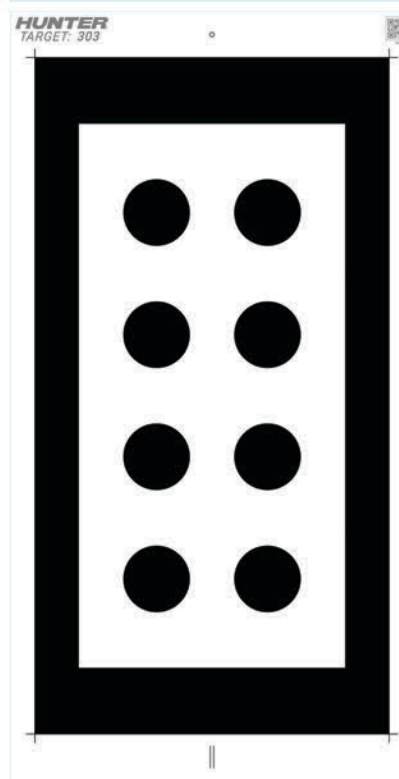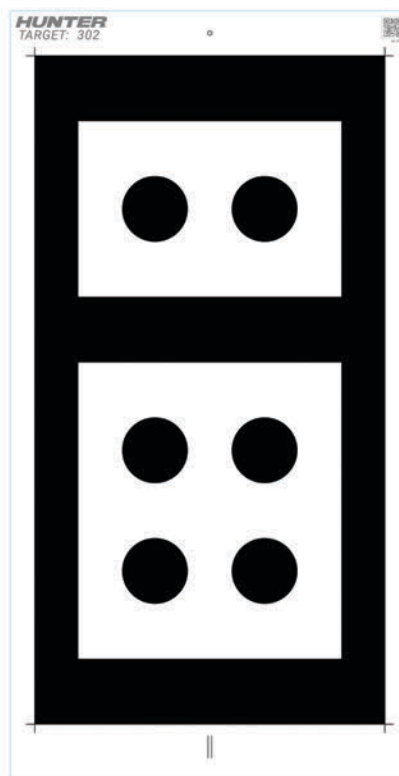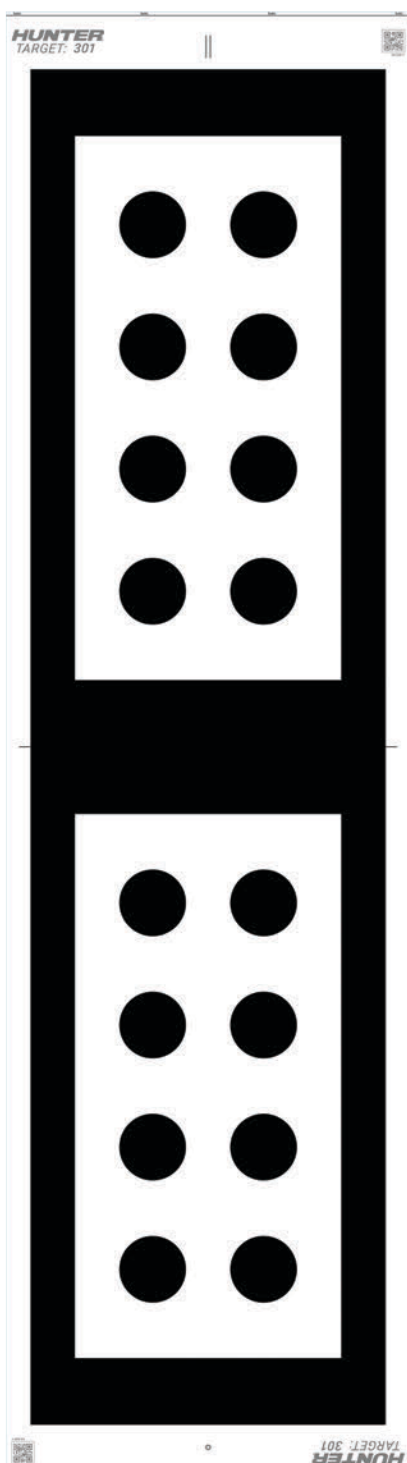

1. Honda ADAS Mat Storage Instructions for Kit 20-3935-1

This document contains instructions for proper storage of ADAS floor mats after ADAS usage.



TIP

Please read over this document before returning mats to the console.



NOTE

Each Honda Target mat arrives in its own box.

1.1. Mat 301

1. When ready to put the 301 (64-228-1) mat away, begin to roll at the black roller bar.

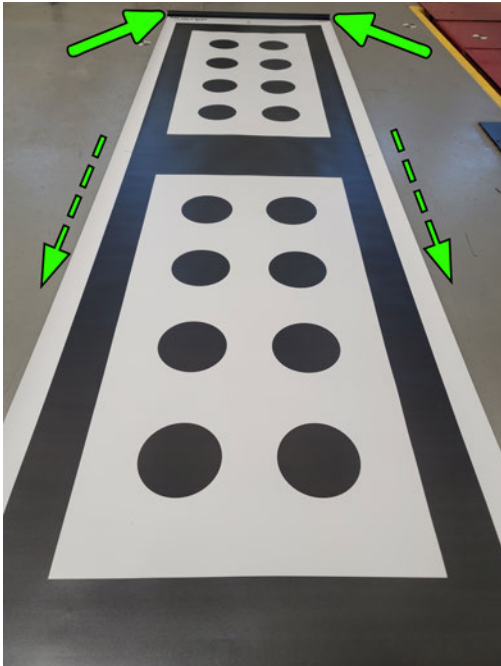


FIGURE 1

2. Roll the mat up tightly.



FIGURE 2

3. Return target mat to Target Drawer on console.



FIGURE 3

1.1.1. Mat 302-3

1. When ready to put the mats away begin by putting the target mats 302 (64-197-2) & 303 (64-230-1) side by side.



FIGURE 1

2. All target mats are marked with a dot and two lines.

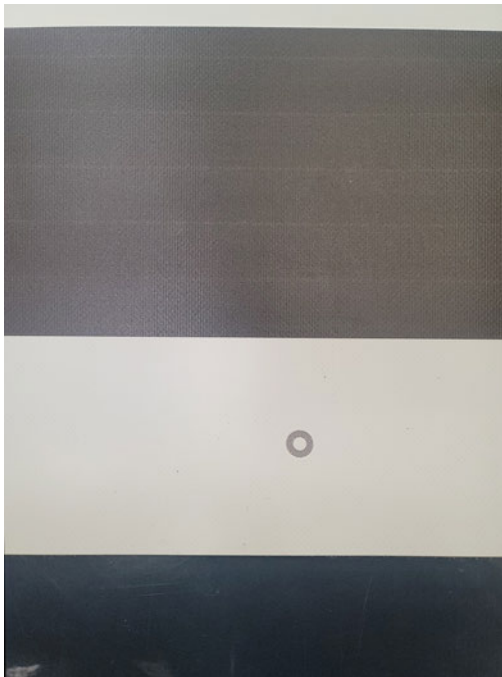


FIGURE 2



FIGURE 3

3. Make sure to flip mat 302 (64-197-2) onto mat 303 (64-230-1). Dot to dot and lines to lines.

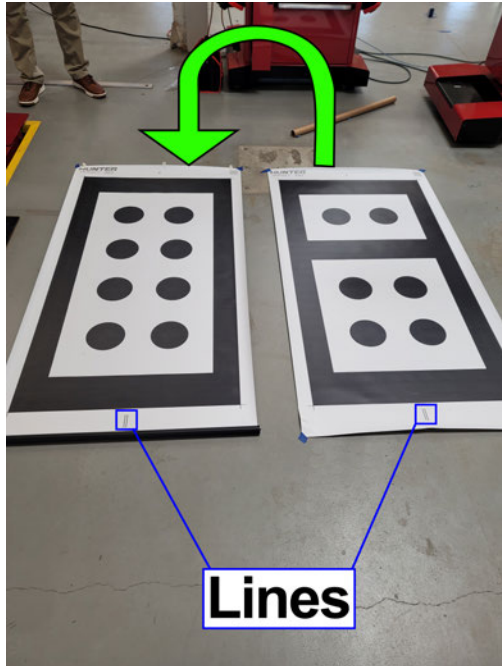


FIGURE 4



FIGURE 5



NOTE

Having mat 302 (64-197-2) facedown not only helps protect the face of the target but also it can reduce the curl it may acquire from being rolled up.

4. Starting at the black roller roll the mats up together.



FIGURE 6

5. Return rolled up mats to Target Drawer.



FIGURE 7