


KIT 20-3936-1

TOYOTA ADAS MATS

HUNTER
Engineering Company

STORAGE INSTRUCTIONS

Form AM08125-00
Publication Date: 07-25
Supersedes: 01-25

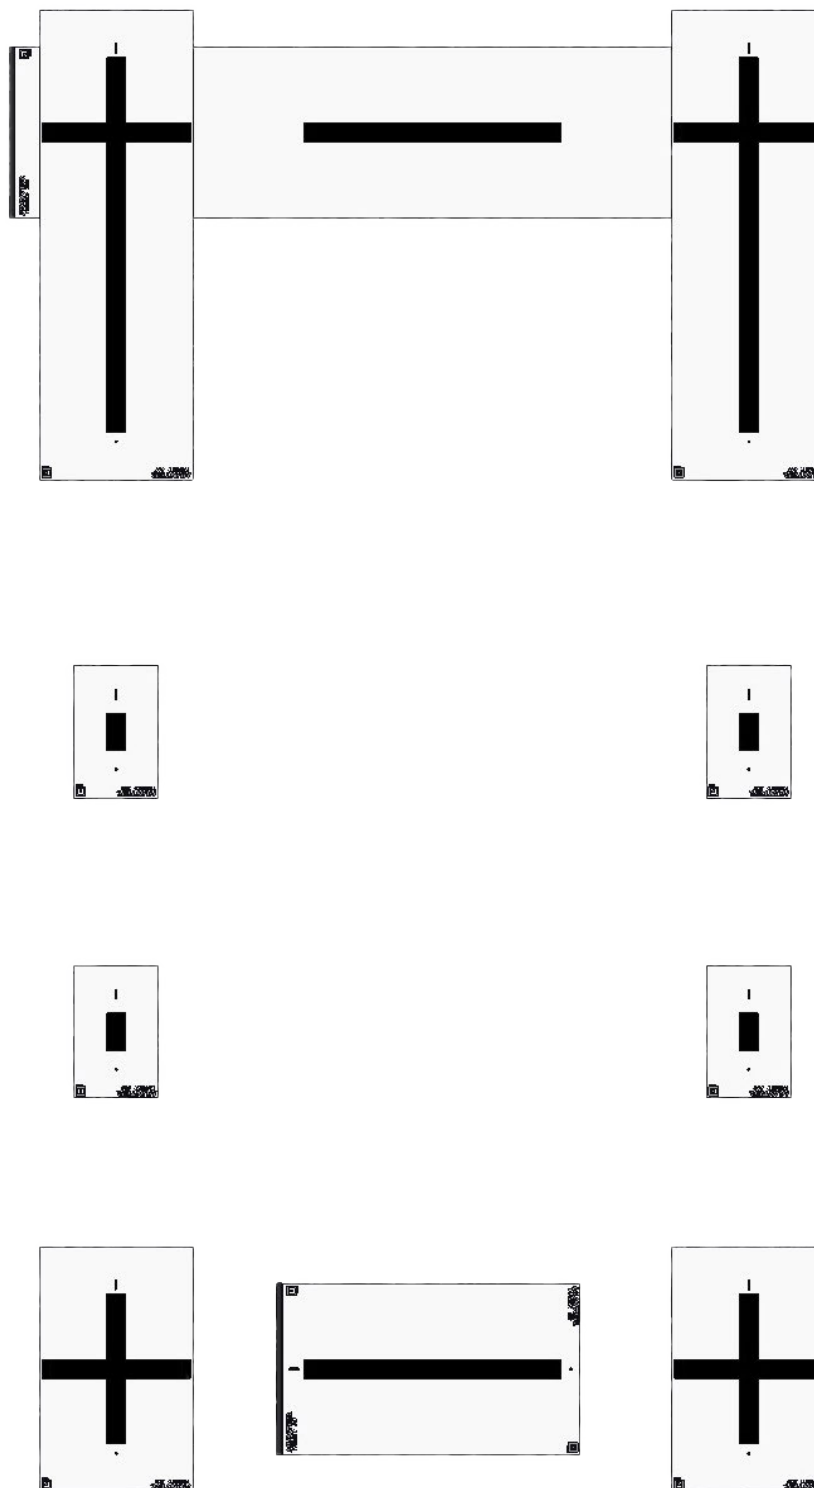

1. Toyota ADAS Mat Storage Instructions

This document contains instructions for proper storage of ADAS floor mats after ADAS usage.



TIP

Please read over this document before returning the mats to the console.

1.1. Inventory Check List

The mats listed below are found in kit 20-3936-1

Qty: 6 Mat: 308 (64-203-2)



Qty: 4 Mat: 309 (64-204-2)



Qty: 1 Mat: 310 (64-234-1)



Qty: 1 Mat: 306 (64-233-1)



Qty: 2 Mat: 307 (64-202-1)



Qty: 1 Mat: 312 (64-235-1)



2. Toyota Mats

Follow instructions on screen for needed mat and directions for mat placement.

2.1. Toyota Front Mats

Mats Included in this section are 308 (64-203-2), 309 (64-204-2), and 310 (64-234-1).



NOTE

Four of the 308 mats and four of the 309 mats will be rolled up into mat 310. Two of the remaining 308 mats are to be retained in storage for Narrow Surround View procedures used by vehicles such as Toyota Crown or Prius.

1. After ADAS use begin by stacking all four of the 308 (64-203-2) mats together in one pile and the two 309 (64-204-2) mats in another separate pile.
2. All Targets have dots and two lines on them.

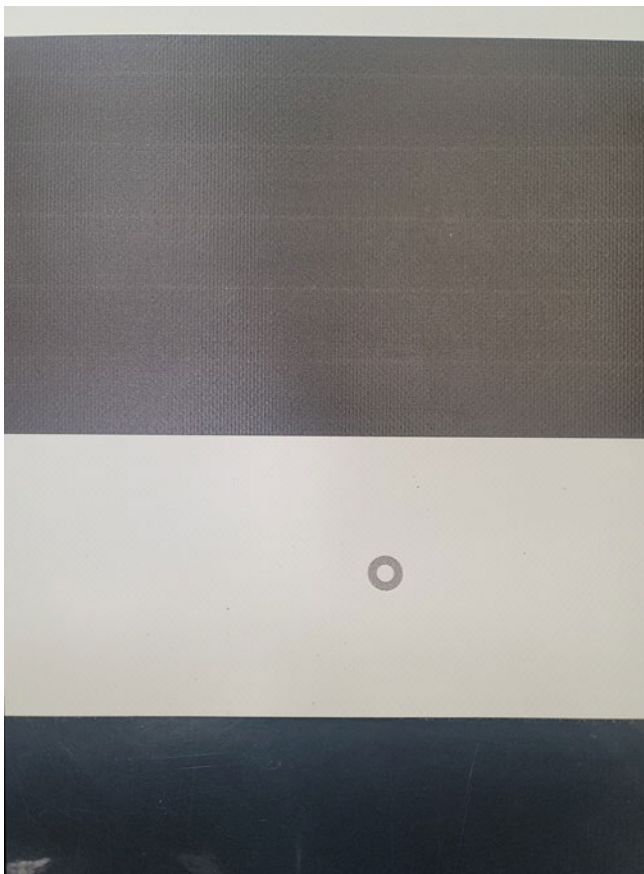


FIGURE1

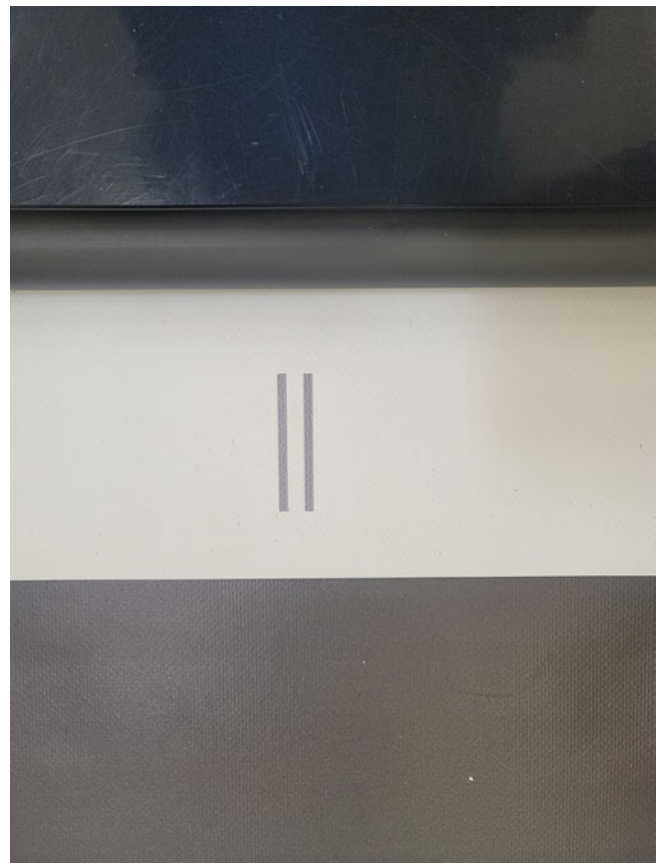


FIGURE 2

3. Have all the mats dots facing one end and the lines on the other end.

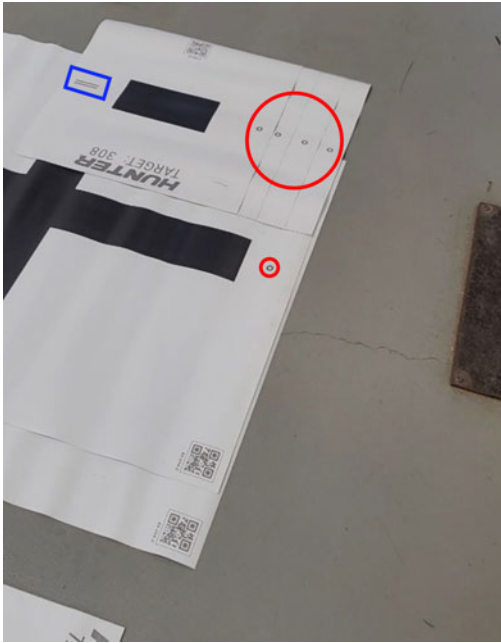


FIGURE 3

4. When Flipping the mats over they must go in order of mat 310 (64-234-1) is the base followed by mats 309 (64-204-2) with mats 308 (64-203-2) sitting on top. All Mats need to line up on the edge end as shown in figure



FIGURE 4

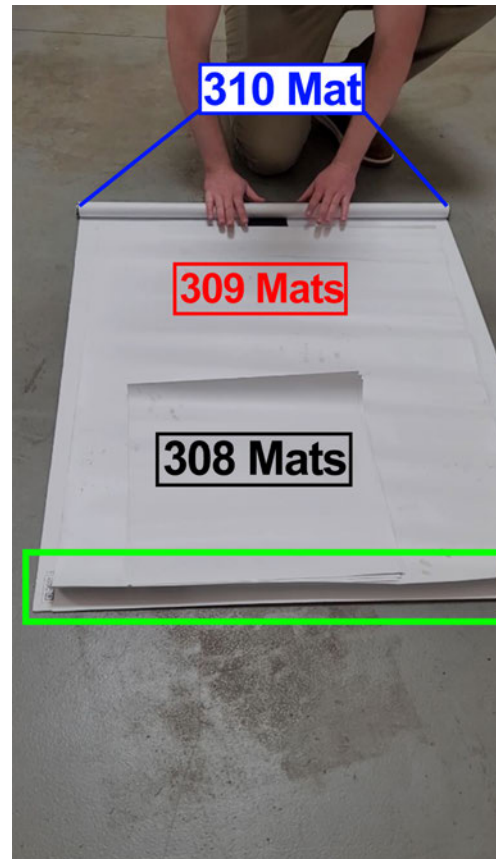


FIGURE 5

5. With all the mats positioned properly, roll them all up together.

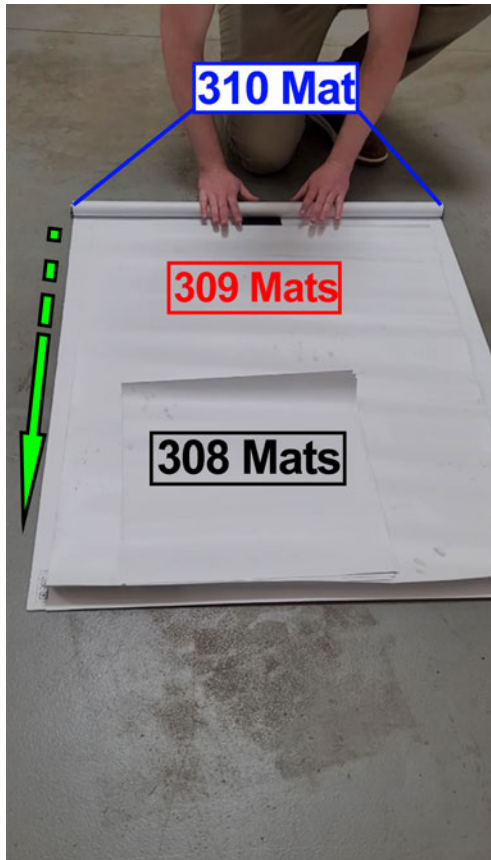


FIGURE 6



FIGURE 7

6. Return rolled up mats back to drawer.



FIGURE 8

2.2. Toyota Rear Mats

Mats included in this section are 306 (64-233-1) and 307 (64-202-1).

1. Line up the target mats side by side when done with ADAS usage.



FIGURE 1

2. All target mats are marked with a dot and two lines.

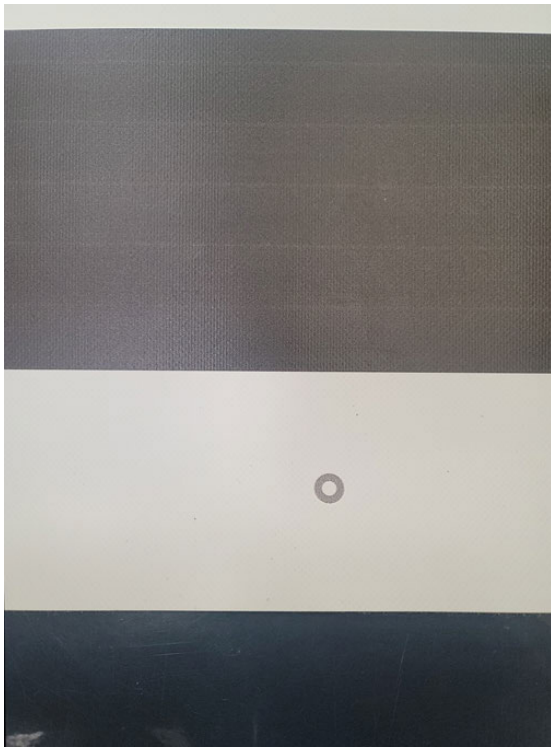


FIGURE 2

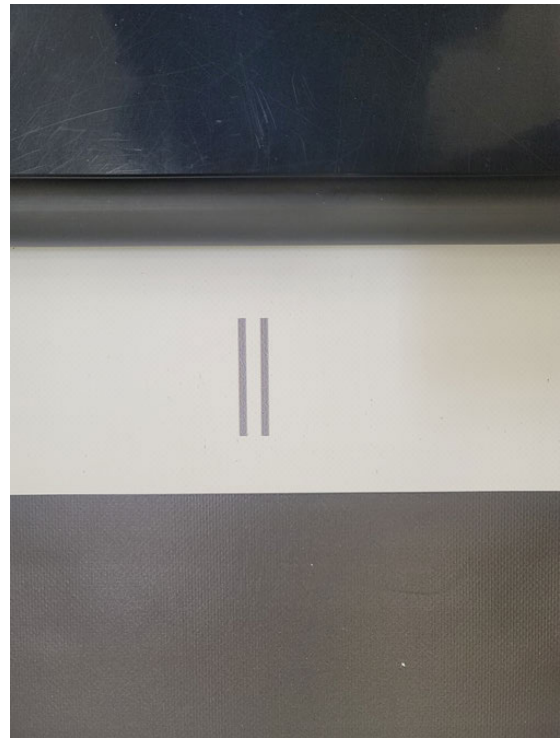


FIGURE 3

3. All three mats should have the dots facing one end and the lines on the other end.

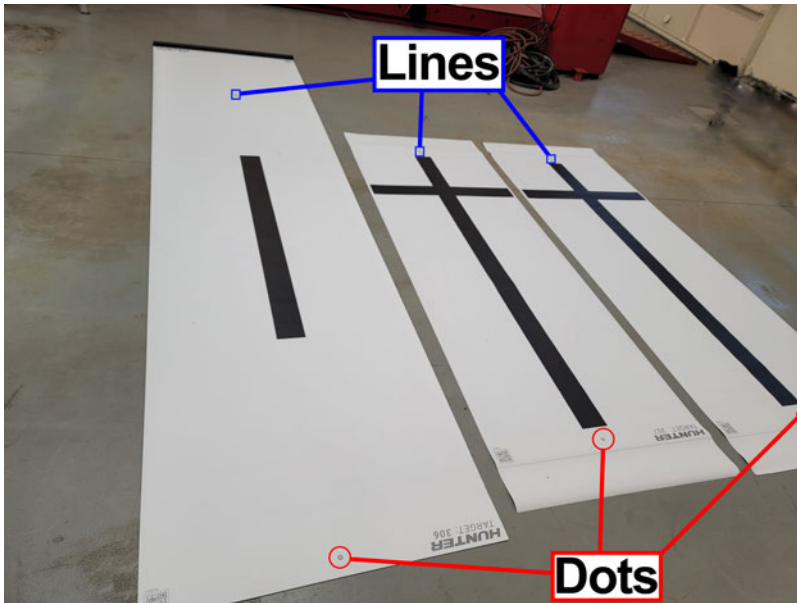


FIGURE 4

4. Place the 307 (64-202-2) mats face side up on top of each other.



FIGURE 5

5. Place both 307 (64-202-2) mats face down, dot to dot onto the 306 (64-233-1) mat.

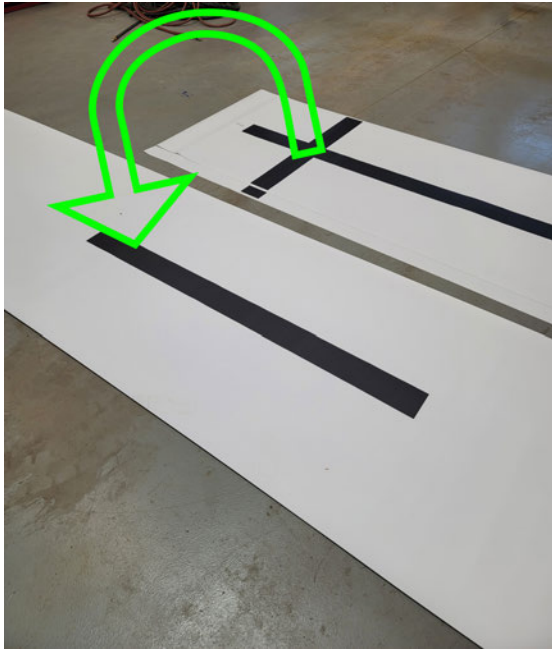


FIGURE 6



FIGURE 7

6. Starting at the black roller roll the mats together and return them to the target drawer on the console.



FIGURE 8