






KIT 20-3937-1

NISSAN ADAS MAT STORAGE

HUNTER
Engineering Company

INSTRUCTIONS

Form AM08207-00
Publication Date: 01-25
Supersedes: 03-24

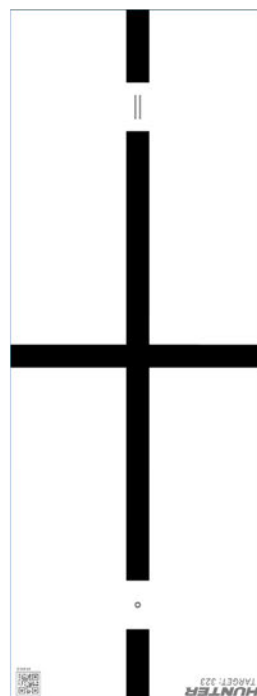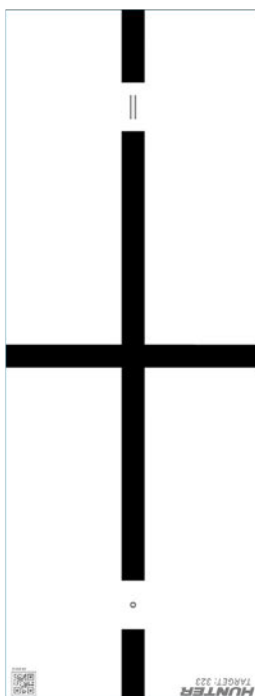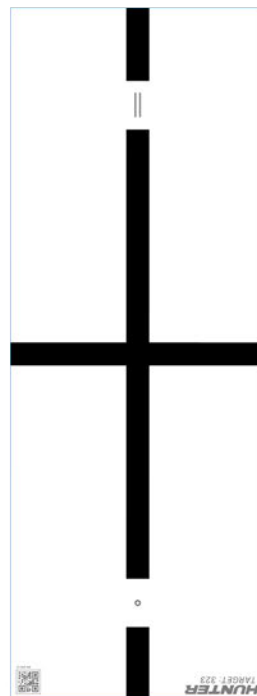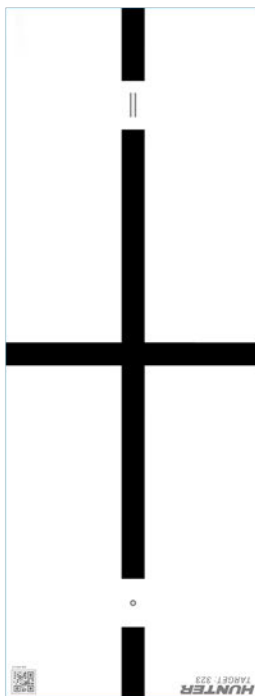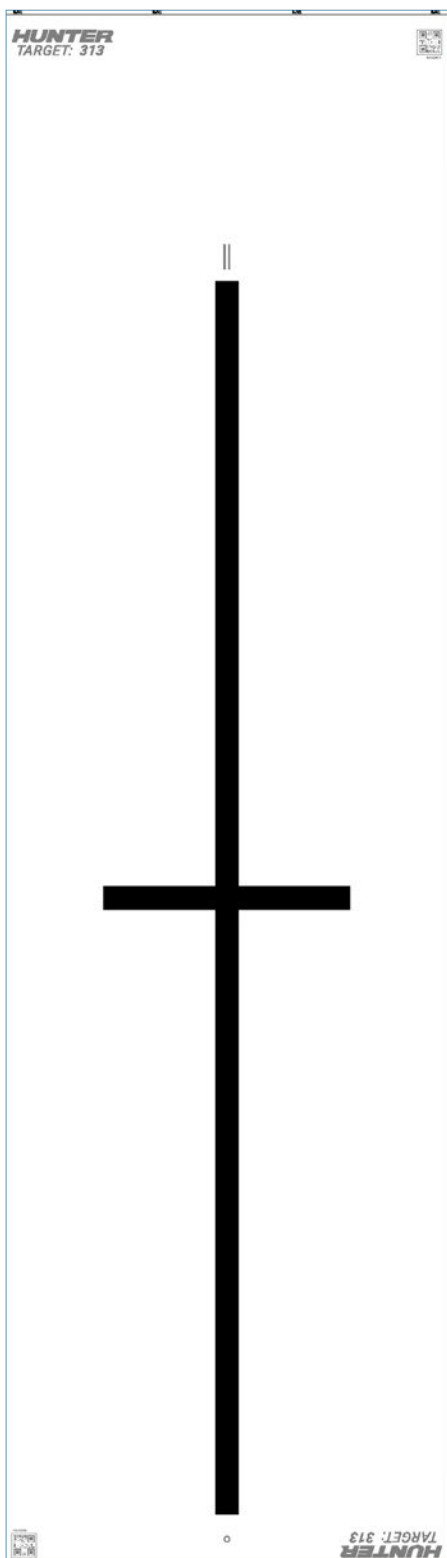

1. Nissan ADAS Mat Storage Instructions

This document contains instructions for proper storage of ADAS floor mats after ADAS usage.

**TIP**

Please read over this document before returning mats to the console.

**NOTE**

Each Nissan Target mat arrives in its own box.

1.1. Mats 313 (64-236-1) and 323 (64-243-2)

**NOTE**

There are a total of 10 mats in Kit 20-3937-1 consisting of 313 (64-236-1) and 323 (64-243-2) mats all together. Two rolls will hold five mats each. Two identical 313 (64-236-1) mats and eight 323 (64-243-2) mats. Five mats are used in the front of a vehicle and five mats are used in the rear.

1. When ready to put away the 313 (64-236-1) and 323 (64-243-2) mats, begin by gathering all five mats together.

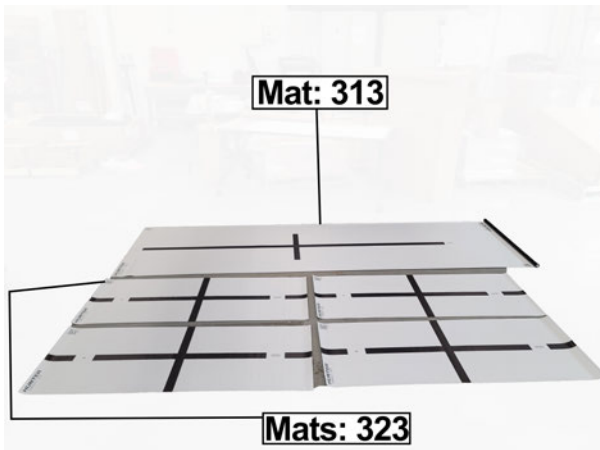


FIGURE 1

2. All mats are marked with a dot and two lines. Stack the four 323 (64-243-2) mats lines over lines and dots over dots as shown in *FIGURE 2*.

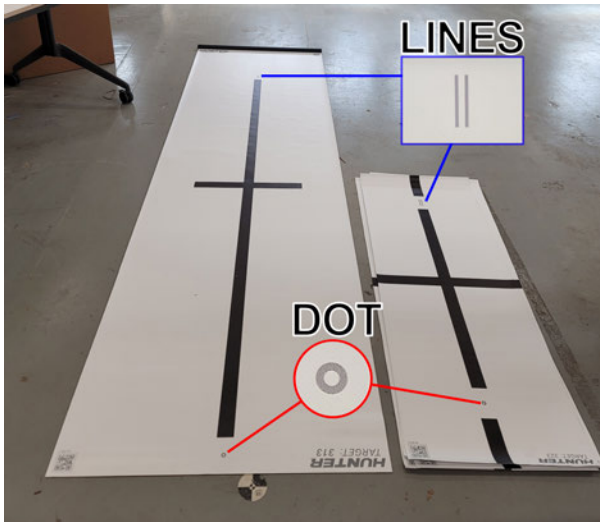


FIGURE 2

3. Flip the 323 mats over onto the 313 (64-236-1) mat with dots and lines facing their respective directions.

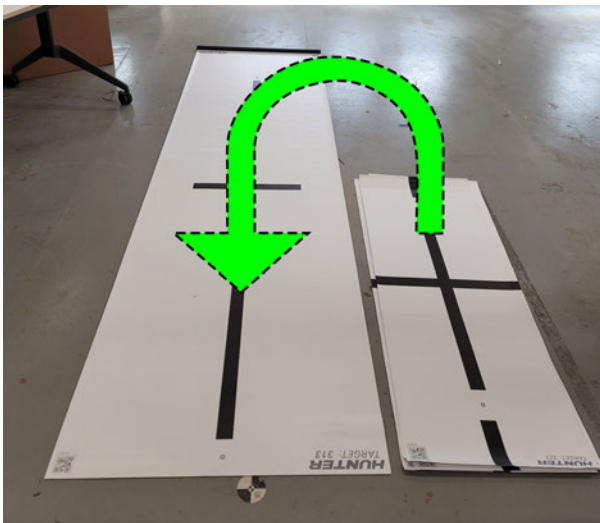


FIGURE 3

- Center the mats as shown in *FIGURE 4* and leave some room at the edge so the mats don't shift too far over the edge when rolling.

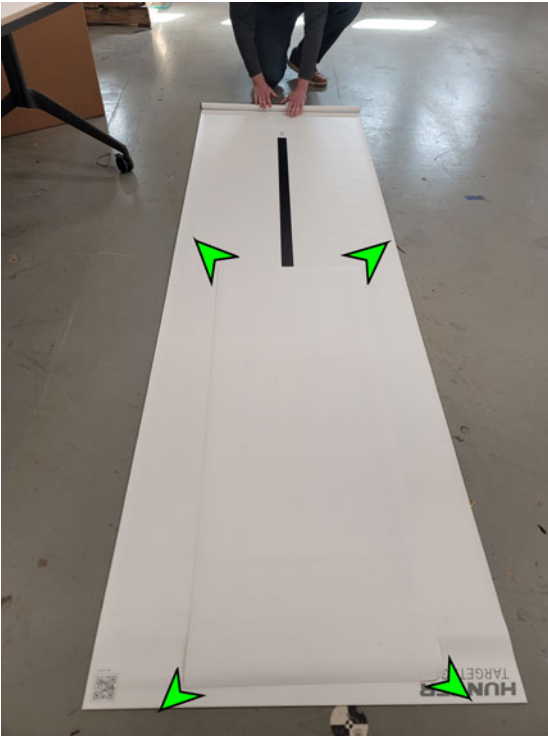


FIGURE 4

- Start from the Black roller of 313 (64-236-1) mat and roll the mats together while keeping the 323 (64-243-2) mats in place.

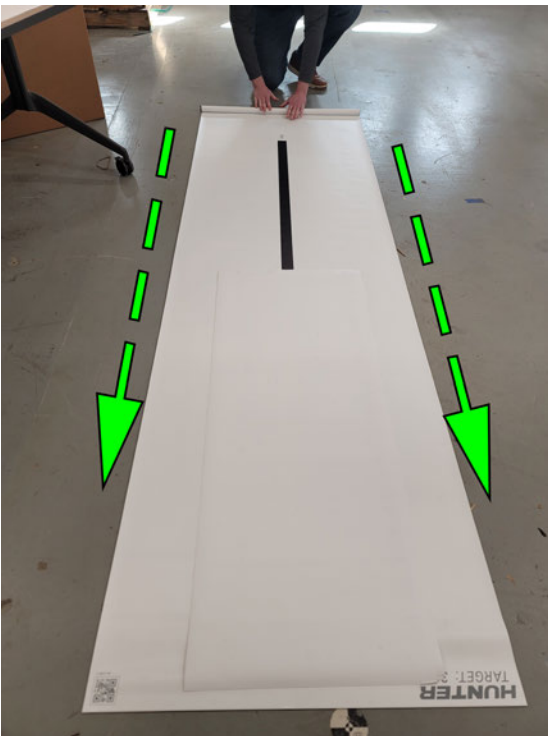


FIGURE 5

6. Place securely rolled mats into target drawer on the console.



FIGURE 6