

USING THE ADASLink with the Ultimate ADAS

QUICK START GUIDE

Form AT08224-00
Publication Date: 11-24





Installation, inspection, & service of equipment should be completed only by an authorized Hunter service representative.

Requirements



- ✓ WinAlign 18+
- ✓ ADASLink (with active subscription & most current software version) and VCI Connector
- ✓ HunterNet 2 Account
- ✓ Internet connection on both WinAlign PC and ADASLink

Activating ADASLink Subscription Code

From the Main Menu select "Settings", from the left menu select **Subscriptions** > **I have a subscription code**

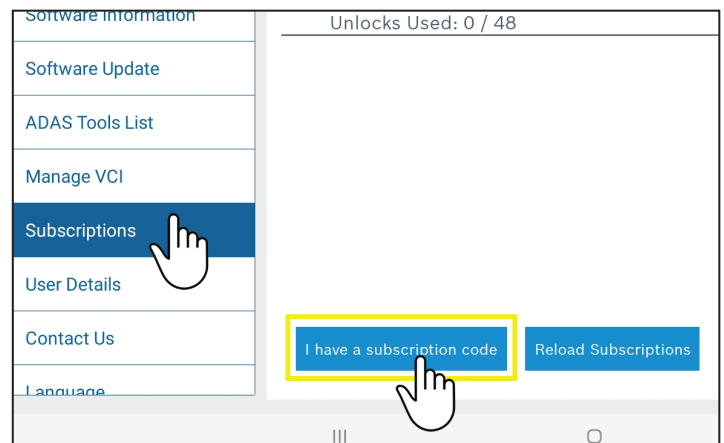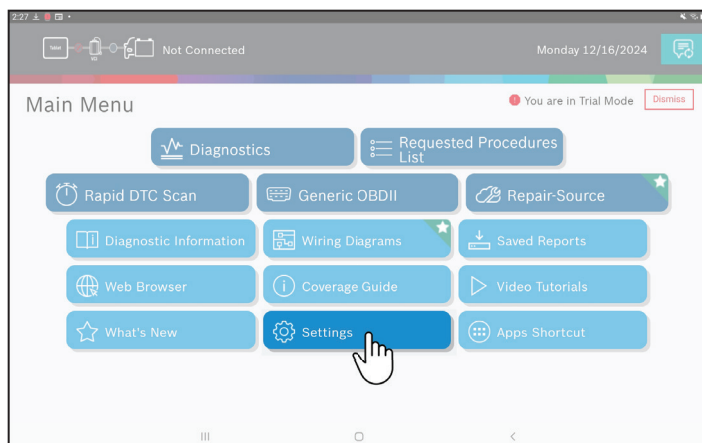

Select the "Subscription Code" field and enter your code, (**DO NOT** hit **Go** on the keyboard)
Minimize the keyboard by hitting the down arrow first, then select **Renew**.

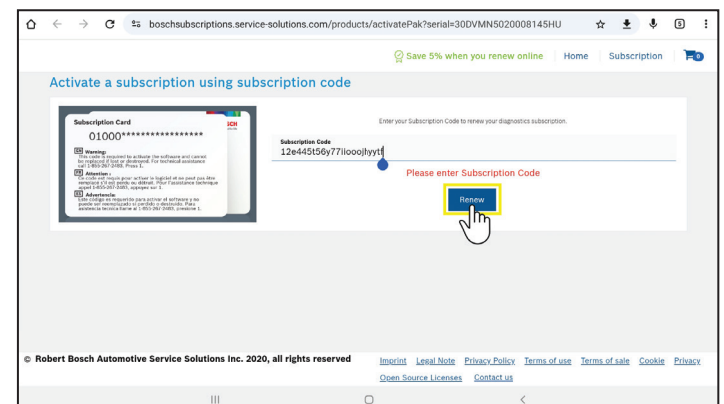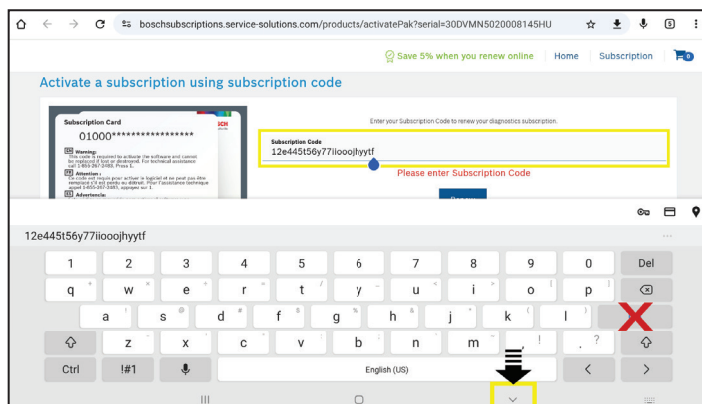


ADASLink Setup

From the Main Menu press



ADAS Tools List > Select Fixture > Hunter Ultimate ADAS (shown below)

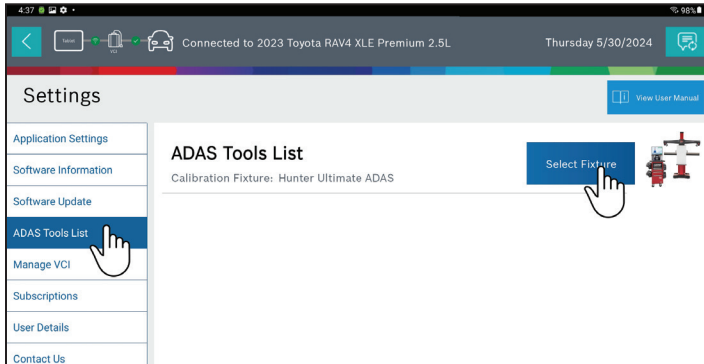


Setup in WinAlign 18+

1. From the Home Screen Press the 2nd tier menu button, then Service Programs > Set Up Aligner > Sensor and ensure **UAD1** is selected.
2. Ensure HunterNet is Enabled. Set Up Aligner > HunterNet: Enable/Disable > **Enable**

3. Service Programs > Set Up Aligner > **ADAS Preferences**, check:

- ✓ Display supported ADAS resets with Codelink AND instructions..
- ✓ Hunter ADASLink®
- ✓ Hunter Ultimate ADAS™ with ADASLink® (ADAS Key needed)
- ✓ Hunter Ultimate ADAS™ with on-site scan tool

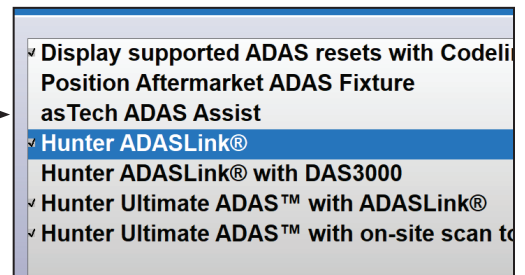


4. For your Steering System calibration, Select "Calibrate with ADASLink"




CodeLink will not be shipping with the Ultimate ADAS

Start Per Car Instructions

1. Ensure VCI device is plugged into vehicle's diagnostic connector and paired together.


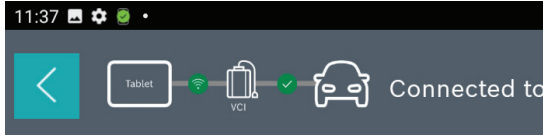


2. Begin Alignment & scan VIN to start.
3. Choose appropriate scan tool, ADASLink Calibration with Pre & Post-Scan, Click "OK".
4. Continue with or without Alignment.
5. Check all ADAS Calibrations you want to perform, hit "OK".
6. Perform your Roll Compensation.
7. Once desired alignment and steering system reset steps are complete, start desired calibrations.


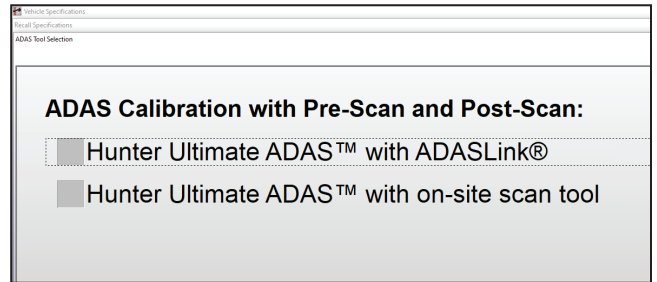


i Initial/first run of calibrations will require a gimbal check.

8. Start calibration (using ADASLink) > On the ADASLink Main Menu Select "Requested Procedures List"

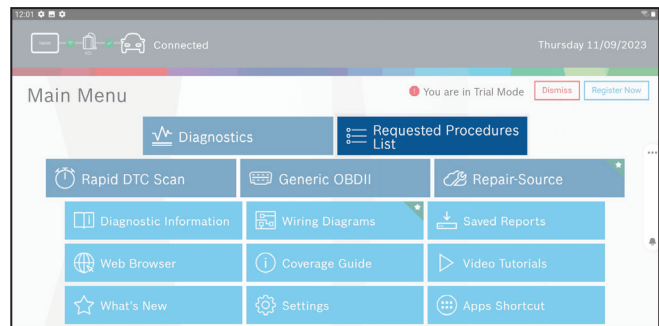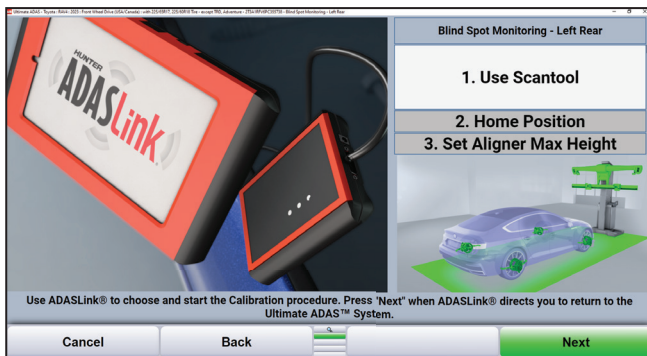

9. Select desired VIN / Vehicle > Start desired procedure by clicking the blue button only (do not check until procedure is complete).

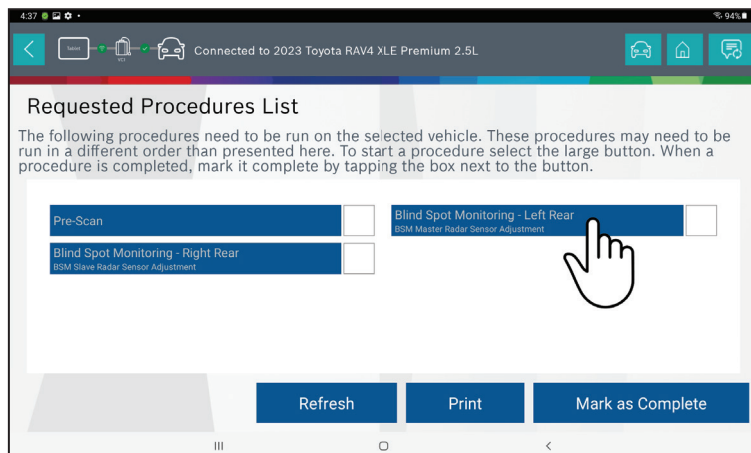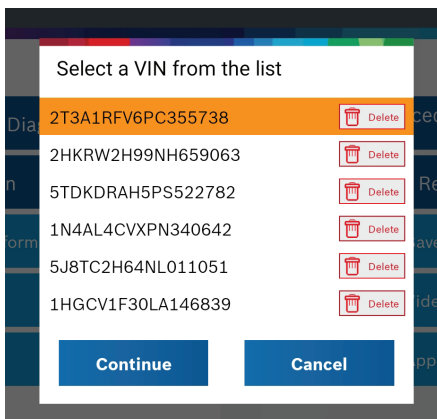

10. Closely follow prompts on both ADASLink and WinAlign, as integrated handoffs will take place to keep communication and procedure flowing correctly.